



N300479-5
65101-11731-E

Installation Instructions Honeycomb Shades Special Shapes


Perfect Arch




Quarter Round L / R

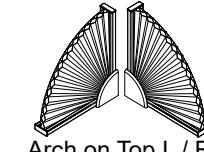


Elongated Eyebrow

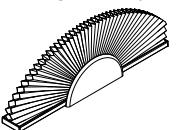


Arch on Top L / R

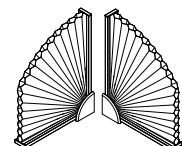


Eyebrow

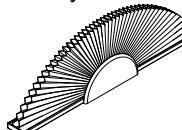


Half Eyebrow L/R

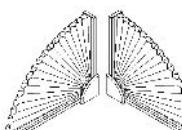

Triangle

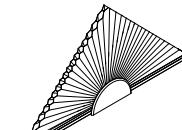

Angle Top L/R

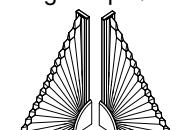

Getting Started

Remove the shade from the package. Save the packaging until the shade is installed and working to your satisfaction.

Tools Needed:


- Power drill and drill bit
- Measuring tape
- Screwdriver
- Level
- Pencil




You will need to use the following fasteners for your particular mounting surface.

Surface	Fastener
Wood	#8x1 1/4" Screws (Provided)
	#6x3/4" Screws (Provided)
Drywall/Plaster	Wall Anchors, Expansion Bolts (Not Provided)
Metal	Sheet Metal Screws (Not Provided)


Check Component/Hardware:




for 3/4" Single
& 1/2" Double



for 9/16" Single



for 3/8" Single

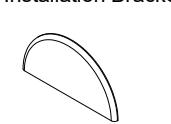

180°Center
Template



90°Center
Template



Hardware Standard Quantity

For perfect arch, Eyebrow, Elongated Eyebrow, and Triangle:

Order Width (X)	X≤48"	X>48"
Installation Bracket	2	4
Bracket Clip (for perfect arch, Eyebrow, Elongated Eyebrow)	4	6
Bracket Clip (Triangle)	6	8
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	


For Quarter Round, Half Eyebrow, Arch on Top, and Angle Top:

Order Width (X)	X≤24"	X>24"
Installation Bracket	2	4
Bracket Clip (Quarter Round, Half Eyebrow, Arch on Top)	2	4
Bracket Clip (Angle Top)	4	6
1 1/4" Screw for Installation Bracket	Installation bracket qty x 2	
3/4" Screw for Bracket Clip	Bracket Clip qty	


Step 1: Assemble the Shade

For Perfect Arch, Eyebrow, Elongated Eyebrow, and Triangle (take Perfect Arch as example):


Open the shade and place the rail into the bottom of 180°center support tightly, and then install the front and back 180°center templates:

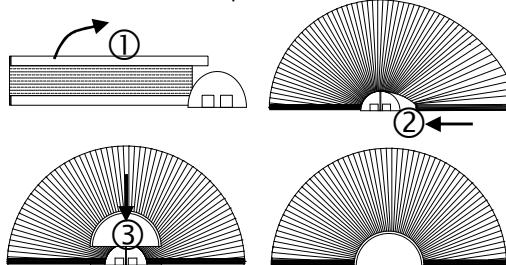


For shade width X≤24", measure 1.5" (38mm) from both ends of the rail to locate the center of the brackets

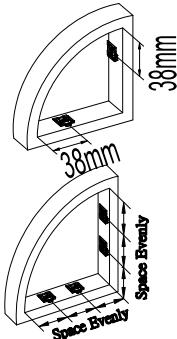

For shade width X>24", space the brackets evenly along the rail

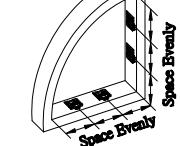


Use two #8x1 1/4" screws to attach the installation brackets on the window frame, The min. distance is 11/16" from the front bracket to the edge of window frame.

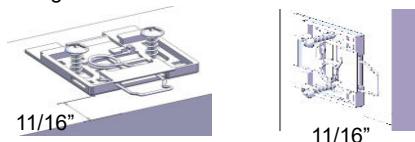


Step 3: Install the Shade

1. Install the Bracket Clip


Insert the Bracket Clip into fabric and then close the Bracket Clip to keep it clamped on the fabric.
Double Cell:

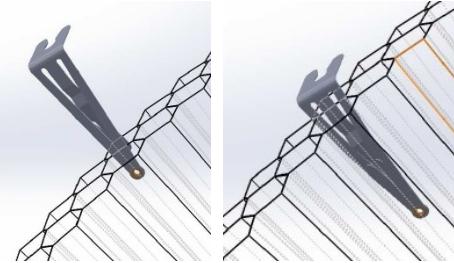



Single Cell:

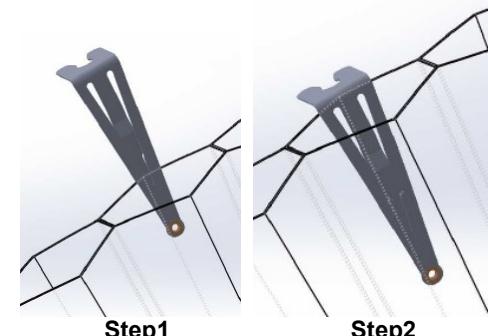

Bracket Clip open and close illustration:

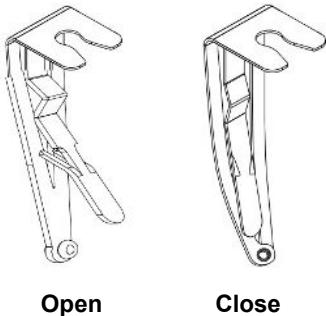


2. Put the shade inside the window opening.

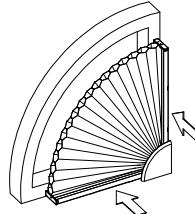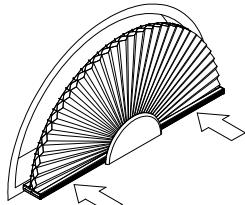


3. Install the Screws for Bracket Clip

Mark the bracket clip location on the mounting surface as shown in the following pictures.


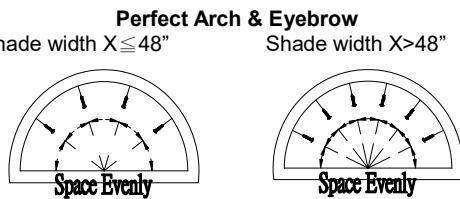


⚠ Please pull up the high point of leg (H) to make leg stand before install the Bracket clip screw. The Bracket clip screw should be installed on the curve, not on the leg (H).



Triangle
Shade width $X \leq 48"$ Shade width $X > 48"$

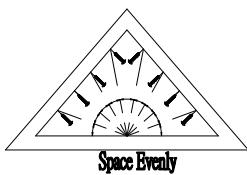

Quarter Round & Half Eyebrow
Shade width $X \leq 24"$ Shade width $X > 24"$

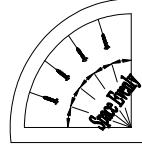
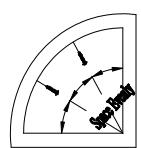


Arch on Top
Shade width $X \leq 24"$ Shade width $X > 24"$

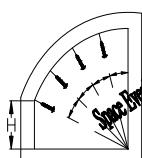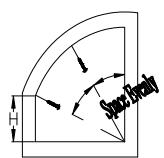


⚠ Please pull up the high point of leg (H) to make leg stand before install the Bracket clip screw. The Bracket clip screw should be installed on the curve, not on the leg (H).

Angle Top
Shade width $X \leq 24"$ Shade width $X > 24"$

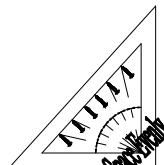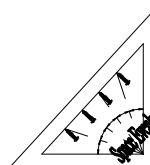


Install a #6x3/4" screw into the corresponding location of the bracket clip about 1 1/8" distance from the front window frame (do not drive the screw completely in and leave around 2mm gap to insert Bracket Clip)

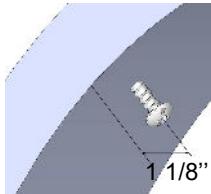


4. Install the rail

Place the front groove of the rail into the front iron wire of the bracket and then push forward to make the back groove of the rail snap into the back groove of the bracket.

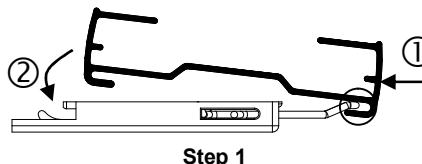


5. Insert the Bracket Clip into the screw from the notch.

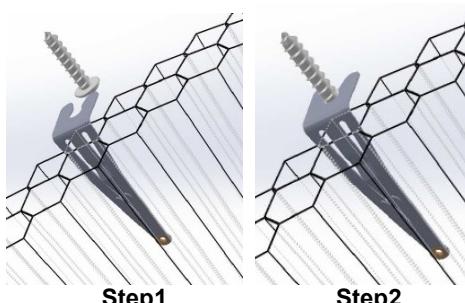

Shade Removal

1. Take off the Bracket Clip from the screw.
2. Backward the rail from the front and then force the rail up from the back.

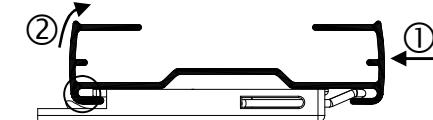

Cleaning

Routine cleaning will help maintain the beauty of your shade. The shade can be cleaned by using a soft brush, vacuumed with a low suction hand-held vacuum, cleaned ultrasonically (specify that a mild solution must be used and that the rail should never be immersed in liquid). Spot cleaning is not recommended, but if necessary, dampen a clean cloth with a solution of warm water and mild detergent to dab the spot until it's gone (do not rub!).

Some options listed may not be applicable.